


 



















 


 





 
 

 
 

 








 

 




 



 
 





















Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Left	 Left
 Mute	 Mute / Dimmer	 OK	 OK
 1	 1	 Right	 Right
 2	 2	 Home	 D.Menu / Top
 3	 3	 Down	 Down
 4	 4	 Exit	 Exit / Cancel / Clear
 5	 5	 Netflix	 Shift + Red / Netflix /
 6	 6	 Vol+	 Vol+
 7	 7	 Info	 Info / Angle
 8	 8	 PR+	 CH+ / Page+
 9	 9	 Vol-	 Vol-
 CH List	 Smart / List	 EPG	 Guide / EPG / -/-
 0	 0	 PR-	 CH- / Page-
 Return/Back	 Back / Return	 Rec	 Rec / Rec Mode
 Menu	 Menu / Home	 Nicam I/II	 Audio / Lang I/II
 Up	 Up	 Text	 Text / Goto
 Source	 AV / Input / RDS	 AD/Subpage	 Sound / Title

Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Left	 Left
 Mute	 Mute / Dimmer	 OK	 OK
 1	 1	 Right	 Right
 2	 2	 Home	 D.Menu / Top
 3	 3	 Down	 Down
 4	 4	 Exit	 Exit / Cancel / Clear
 5	 5	 Netflix	 Shift + Red / Netflix /
 6	 6	 Vol+	 Vol+
 7	 7	 Info	 Info / Angle
 8	 8	 PR+	 CH+ / Page+
 9	 9	 Vol-	 Vol-
 CH List	 Smart / List	 EPG	 Guide / EPG / -/-
 0	 0	 PR-	 CH- / Page-
 Return/Back	 Back / Return	 Rec	 Rec / Rec Mode
 Menu	 Menu / Home	 Nicam I/II	 Audio / Lang I/II
 Up	 Up	 Text	 Text / Goto
 Source	 AV / Input / RDS	 AD/Subpage	 Sound / Title





Originale		Sostituto	
	FAV/Size		Fav / Marker / PC
	FAV/Size		Zoom / Size
	Quick/Hold		Display / Media
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Play		Play / Slow
	Pause/Index		Pause / Step / Freeze
	<</Reveal		<< / Tune-
	>>/Mix		>> / Tune+
	Stop/Cancel		Stop / Hold

Originale		Sostituto	

