



































Originale	Sostituto	Originale	Sostituto
Power	 Power	Down	 Down
Mute	 Mute / Dimmer	Back	 Back / Return
Play/Index	 Play / Slow	Vol+	 Vol+
Pause	 Pause / Step / Freeze	Smart Tv	 Smart / List
<</Reveal	 << / Tune-	P+	 CH+ / Page+
>>/Hold	 >> / Tune+	Vol-	 Vol-
AD	 Audio / Lang I/II	Google Play	 Display / Media
Subtitle	 Subtitle / EQ	P-	 CH- / Page-
Text	 Text / Goto	1	 1
Source	 AV / Input / RDS	2	 2
Menu	 Menu / Home	3	 3
Up	 Up	4	 4
Info	 Info / Angle	5	 5
Left	 Left	6	 6
OK	 OK	7	 7
Right	 Right	8	 8
Exit	 Exit / Cancel / Clear	9	 9



Originale	Sostituto	Originale	Sostituto
Guide	 Guide / EPG / -/--		
0	 0		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
Home	 Shift + Menu /		
Netflix	 Shift + Red / Netflix /		
YouTube	 Shift + Yellow / YouTube /		
prime video	 Shift + Blue / Prime /		

