



Originale		Sostituto		Originale		Sostituto	
	Power		Power				
	Mute		Mute / Dimmer				
	Front +		Up				
	Front -		Down				
	CEN -		Left				
	CEN +		Right				
	SURR +		CH+ / Page+				
	SURR -		CH- / Page-				
	TRE -		<< / Tune-				
	TRE +		>> / Tune+				
	BASS -		<< / Preset-				
	BASS +		>>   / Preset+				
	SUB -		Display / Media				
	SUB +		Smart / List				
	Master +		Vol+				
	Master -		Vol-				

