











 



 

































 





















| Originale | | Sostituto | | Originale | | Sostituto | |
|---|-----------|---|------------------|---|----------|---|-----------------------|
|  | Power |  | Power |  | Vol + |  | Vol+ |
|  | Mute |  | Mute / Dimmer |  | MTS |  | Audio / Lang I/II |
|  | 1 |  | 1 |  | CH + |  | CH+ / Page+ |
|  | 2 |  | 2 |  | Vol - |  | Vol- |
|  | 3 |  | 3 |  | REC List |  | Smart / List |
|  | 4 |  | 4 |  | CH - |  | CH- / Page- |
|  | 5 |  | 5 |  | FAV List |  | Fav / Marker / PC |
|  | 6 |  | 6 |  | REC |  | Rec / Rec Mode |
|  | 7 |  | 7 |  | Freeze |  | Pause / Step / Freeze |
|  | 8 |  | 8 |  | Menu |  | Menu / Home |
|  | 9 |  | 9 |  | Up |  | Up |
|  | DTV / ATV |  | D.Menu / Top |  | Source |  | AV / Input / RDS |
|  | 0 |  | 0 |  | Left |  | Left |
|  | Recall |  | Back / Return |  | Enter |  | OK |
|  | P.Mode |  | Picture / Format |  | Right |  | Right |
|  | S.Mode |  | Sound / Title |  | Exit |  | Exit / Cancel / Clear |
|  | Sleep |  | Sleep / Timer |  | Down |  | Down |





| Originale | | Sostituto | |
|-----------|------------------------|-----------|-----------------------------|
| | Display | | Display / Media |
| | Red | | Red / Netflix / Search |
| | Green | | Green / APP / Repeat |
| | Yellow | | Yellow / YouTube / Repeat |
| | Blue | | Blue / Prime Video / Random |
| | << / Guide | | << / Tune- |
| | << / Guide | | Guide / EPG / -/-- |
| | Play/Pause / Timeshift | | Play / Slow |
| | >> / Aspect | | >> / Tune+ |
| | I<< / Cancel | | I<< / Preset- |
| | >>I / Subpage | | >>I / Preset+ |
| | Stop / Index | | Info / Angle |
| | Stop / Index | | Stop / Hold |
| | TV / Radio | | TV/Radio / |
| | Subtitle | | Subtitle / EQ |
| | Reveal | | Setup / OPT / |
| | Size | | Zoom / Size |

| Originale | | Sostituto | |
|-----------|------|-----------|----------------|
| | Hold | + | Shift + Stop / |
| | Text | | Text / Goto |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

