



Originale	Sostituto
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
List	Smart / List
0	0
Recall	Back / Return
V +	Vol+
Aspect	Shift + Picture / Format
CH +	CH+ / Page+

Originale	Sostituto
V -	Vol-
Home	Shift + Menu /
CH -	CH- / Page-
Menu	Menu / Home
Up	Up
Source	AV / Input / RDS
Left	Left
Enter	OK
Right	Right
Exit	Exit / Cancel / Clear
Down	Down
Display	Display / Media
P.Mode	Picture / Format
S.Mode	Sound / Title
Sleep	Sleep / Timer
MTS	Shift + Smart / List
Rec	Rec / Rec Mode





Originale	Sostituto
Guide	Guide / EPG / -/--
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
<< / Index	<< / Tune-
<< / Index	Shift + << /
Play/Pause /	Shift + Play /
Play/Pause /	Pause / Step / Freeze
Play/Pause /	Play / Slow
>> / TTX	>> / Tune+
>> / TTX	Shift + >> /
I<< / Sub.Pg	Shift + I<< / Preset-
I<< / Sub.Pg	I<< / Preset-
>>I / Reveal	>>I / Preset+
Stop / Mix	Shift + Rec / Rec Mode
Stop / Mix	Shift + Stop /

Hold

Originale	Sostituto
CAP	Shift + Display / Media
Subtitle	Subtitle / EQ
TV / Radio	TV/Radio /
FAV	Fav / Marker / PC
Size / Mouse	Zoom / Size
Hold / Refresh	Stop / Hold

