 
 

 

 
 






 



 













































Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Play	 Play / Slow
 Record	 Rec / Rec Mode	 Exit	 Exit / Cancel / Clear
 Mute	 Mute / Dimmer	 FAV	 Fav / Marker / PC
 1	 1	 Stop	 Stop / Hold
 2	 2	 Up/CH+	 Up
 3	 3	 Left	 Left
 4	 4	 Vol-	 Vol-
 5	 5	 OK	 OK
 6	 6	 Right	 Right
 7	 7	 Vol+	 Vol+
 8	 8	 Down/CH-	 Down
 9	 9	 Red	 Red / Netflix / Search
 Info	 Info / Angle	 Green	 Green / APP / Repeat
 0	 0	 Yellow	 Yellow / YouTube / Repeat
 Recall	 Back / Return	 Audio	 Audio / Lang I/II
 Menu	 Menu / Home	 Blue	 Blue / Prime Video / Random
 EPG	 Guide / EPG / -/--	 Pause	 Pause / Step / Freeze

Originale	Sostituto	Originale	Sostituto
 Power	 Power	 TV	 TV
 Record	 Record	 DVD	 DVD
 Mute	 Mute	 SAT	 SAT
 1	 1	 AUX	 AUX
 2	 2	 SLOW	 SLOW
 3	 3	 STEP-FREEZE	 STEP-FREEZE
 4	 4	 HOLD	 HOLD
 5	 5	 CLEAR	 CLEAR
 6	 6	 EXIT	 EXIT
 7	 7	 CANCEL	 CANCEL
 8	 8	 PC FAV MARKER	 PC FAV MARKER
 9	 9	 STOP	 STOP
 Info	 Info	 HOLD	 HOLD
 0	 0	 Up	 Up
 Recall	 Recall	 Left	 Left
 Menu	 Menu	 Vol-	 Vol-
 EPG	 EPG	 OK	 OK
		 Right	 Right
		 Vol+	 Vol+
		 Down/CH-	 Down/CH-
		 Red	 Red
		 Green	 Green
		 Yellow	 Yellow
		 Audio	 Audio
		 Pause	 Pause





Originale	Sostituto	Originale	Sostituto
 TTX	 Text / Goto		
 Subtitle	 Subtitle / EQ		
 Tv/Radio	 TV/Radio /		

