

























 
 
 











 







 

























Originale		Sostituto		Originale		Sostituto	
	Power		Power		Up		Up
	TV / SAT		Shift + TV/Radio / Program		Mode		D.Menu / Top
	Pause		Pause / Step / Freeze		Left		Left
	Sleep		Sleep / Timer		OK		OK
	1		1		Right		Right
	2		2		Exit		Exit / Cancel / Clear
	3		3		Down		Down
	4		4		TV / Rad		TV/Radio /
	5		5		Color		Picture / Format
	6		6		i		Info / Angle
	7		7		Help		Shift + Info / Angle
	8		8		Mute		Mute / Dimmer
	9		9		Audio		Audio / Lang I/II
	RCL		Setup / OPT /		Subtitle		Subtitle / EQ
	0		0		Red		Red / Netflix / Search
	EPG		Guide / EPG / -/--		Green		Green / APP / Repeat
	Menu		Menu / Home		Yellow		Yellow / YouTube / Repeat





Originale

Sostituto

Originale	Sostituto
	Blue  Blue / Prime Video / Random

Originale

Sostituto

Originale	Sostituto

