 
 





 





 

 
 




 



 

 










 








 

 
 




 
 

 









Originale	Sostituto	Originale	Sostituto
 Power Receiver	 Power	 Muting	 Mute
 Display	 Info	 Vol+	 Vol +
 BD / DVD	 1	 Vol-	 Vol -
 VCR / DVR	 2	 Home	 Smart
 CBL / SAT	 3	 CH+	 Ch +
 GAME	 4	 CH-	 Ch -
 PC	 5	 SP Layout	 D. Menu
 AUX	 6	 Menu	 Menu
 TUNER	 AV	 Up	 Up
 TUNER	 7	 Left	 Left
 TV / CD	 8	 Enter	 Ok
 PHONO	 9	 Right	 Right
 PORT	 GUIDE	 Down	 Down
 NET	 Shift + Media	 Setup	 Options
 NET	 0	 Return	 Back
 USB	 Media	 I<<	 I<<
 USB	 Pre Ch	 >>I	 >>I

Originale	Sostituto	Originale	Sostituto
 Muting	 Mute	 MUTE	 MUTE
 Vol+	 Vol +	 VOL+	 VOL +
 Vol-	 Vol -	 VOL-	 VOL -
 Home	 Smart	 HOME	 SMART
 CH+	 Ch +	 CH+	 CH +
 CH-	 Ch -	 CH-	 CH -
 SP Layout	 D. Menu	 GUIDE/SP LAYOUT	 D.MENU
 Menu	 Menu	 PREV CH/MENU	 TOP MENU
 Up	 Up	 UP	 UP
Left	Left	LEFT	LEFT
Enter	Ok	ENTER	OK
Right	Right	PLAYLIST	RIGHT
Down	Down	DOWN	DOWN
Setup	Options	SETUP	OPT
Return	Back	RETURN	BACK
I<<	I<<	I<<	I<<
>>I	>>I	>>I	>>I






Originale	Sostituto
	 <<
	 Play
	 >>
	 Pause / Play Rev.
	 Stop
	 Red
	 Green
	 Yellow
	 Blue
	 Dual
	 TV/R
	 Sleep
	 Shift + 1
	 Shift + 2
	 Shift + 3
	 Shift + 4
	 Shift + 5

Originale	Sostituto
	 Shift + 6
	 Shift + 7
	 Shift + 8
	 Shift + 9
	 Shift + 0





Originale	Sostituto	Originale	Sostituto
 Power Receiver	 Power	 Vol+	 Vol +
 BD / DVD	 1	 Vol-	 Vol -
 VCR / DVR	 2	 Home	 Smart
 CBL / SAT	 3	 CH+ / Album+	 Ch +
 GAME	 4	 CH- / Album-	 Ch -
 PC	 5	 Top Menu	 D. Menu
 AUX	 6	 Menu	 Menu
 TUNER	 AV	 Up	 Up
 TUNER	 7	 Page- / Playlist-	 Left
 TV / CD	 8	 Enter	 Ok
 PHONO	 9	 Page+ / Playlist+	 Right
 PORT	 Guide	 Down	 Down
 NET	 Shift + Media	 Setup	 Options
 NET	 0	 Return	 Back
 USB	 Media	 I<<	 I<<
 USB	 Pre Ch	 >>I	 >>I
 Muting	 Mute	 <<	 <<






Originale	Sostituto
	 Play
	 >>
	 Pause
	 Stop
	 TV/R
	 Red
	 Green
	 Text
	 Yellow
	 Blue
	 +  Shift + Play
	 +  Shift + 1
	 +  Shift + 2
	 +  Shift + 3
	 +  Shift + 4
	 +  Shift + 5
	 +  Shift + 6

Originale	Sostituto
	 +  Shift + 7
	 +  Shift + 8
	 +  Shift + 9
	 +  Shift + 0
	 +  Shift + Guide
	 Sleep
	 Info
	 Exit





Originale	Sostituto	Originale	Sostituto
 Power Receiver	 Power	 Muting	 Mute
 Display	 Info	 Vol+	 Vol +
 BD / DVD	 1	 Vol-	 Vol -
 VCR / DVR	 2	 Home	 Smart
 CBL / SAT	 3	 CH+	 Ch +
 GAME	 4	 CH-	 Ch -
 PC	 5	 SP Layout	 Shift + Menu
 AUX	 6	 Menu	 Menu
 TUNER	 7	 Up	 Up
 TV / CD	 8	 Left	 Left
 PHONO	 9	 Enter	 Ok
 TUNER	 AV	 Right	 Right
 PORT	 Guide	 Down	 Down
 NET	 0	 Setup	 Options
 NET	 Shift + Media	 Return	 Back
 USB	 Pre Ch	 I<<	 I<<
 USB	 Media	 >>I	 >>I

Originale	Sostituto	Originale	Sostituto
 Muting	 Mute	 Vol+	 Vol +
 Vol-	 Vol -	 Home	 Smart
 CH+	 Ch +	 CH-	 Ch -
 SP Layout	 Shift + Menu	 Menu	 Menu
 Up	 Up	 Left	 Left
 Right	 Right	 Down	 Down
 Setup	 Options	 Return	 Back
 I<<	 I<<	 >>I	 >>I





 




 




 
 
 
 
 


 
 
 
 

 


Originale	Sostituto
	 <<
	 >>
	 Play
	 Pause
	 Stop
	 Red
	 Green
	 Yellow
	 Blue
	 Dual
	 TV/R
	 Sleep
	 Shift + 1
	 Shift + 2
	 Shift + 3
	 Shift + 4
	 Shift + 5

Originale	Sostituto
	 Shift + 6
	 Shift + 7
	 Shift + 8
	 Shift + 9
	 Shift + 0





 
 

Originale	Sostituto
 Power	 Power
 Display	 Info
 BD / DVD	 1
 VCR / DVR	 2
 CBL / SAT	 3
 GAME	 4
 PC	 5
 AUX	 6
 TUNER	 7
 TUNER	 AV
 TV / CD	 8
 PHONO	 9
 PORT	 Guide
 NET	 0
 NET	 Shift + Media
 USB	 Pre Ch
 USB	 Media

Originale	Sostituto
 Muting	 Mute
 Vol+	 Vol +
 Vol-	 Vol -
 Home	 Smart
 CH+	 Ch +
 CH-	 Ch -
 SP Layout	 Shift + Menu
 Menu	 Menu
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Setup	 Options
 Return	 Back
 I<<	 I<<
 >>I	 >>I





Originale	Sostituto
	 <<
	 >>
	 Play
	 Pause
	 Stop
	 Red
	 Green
	 Yellow
	 Blue
	 Dual
	 TV/R
	 Sleep
	 Shift + 1
	 Shift + 2
	 Shift + 3
	 Shift + 4
	 Shift + 5

Originale	Sostituto
	 Shift + 6
	 Shift + 7
	 Shift + 8
	 Shift + 9
	 Shift + 0

