
 










 




 
 




 



 

 
 
 



 




Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Vol+	 Vol+
 Sleep	 Sleep / Timer	 Folder	 Smart / List
 Dimmer	 Shift + Dimmer / Mute	 Down	 Down
 Open / Close	 Eject / Surround	 Mode	 Info / Angle
 CD	 3	 Vol-	 Vol-
 USB	 8	 I<<	 I<< / Preset-
 Bluetooth	 9	 Play / Pause	 Play / Slow
 Tuner	 6	 Play / Pause	 Pause / Step / Freeze
 Line	 2	 >>I	 >>I / Preset+
 Display	 Display / Media	 << / Tuning <	 << / Tune-
 Menu	 Menu / Home	 Stop	 Stop / Hold
 Timer	 Shift + Sleep / Timer	 >> / Tuning >	 >> / Tune+
 Muting	 Mute / Dimmer	 Clear	 Exit / Cancel / Clear
 Up	 Up	 Clock Call	 Setup / OPT /
 Left	 Left	 Tone	 Audio / Lang I/II
 Enter	 OK	 S.Bass	 Sound / Title
 Right	 Right	 Repeat	 Green / APP / Repeat



