







 





























Originale	Sostituto
 Power	 Power
 i	 Info / Angle
 Analog Menu	 Menu / Home
 Digital Menu	 D.Menu / Top
 1	 1
 2	 2
 3	 3
 Input Select	 AV / Input / RDS
 4	 4
 5	 5
 6	 6
 TV/DVB-T	 Display / Media
 7	 7
 8	 8
 9	 9
 Guide (EPG)	 Guide / EPG / -/--
 Timer	 Sleep / Timer

Originale	Sostituto
 0	 0
 Mute	 Mute / Dimmer
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 Up	 Up
 P+	 CH+ / Page+
 Left	 Left
 Enter/CH List	 OK
 Enter/CH List	 Smart / List
 Right	 Right
 Vol-	 Vol-
 Down	 Down
 P-	 CH- / Page-
 TV/Radio	 TV/Radio /
 [≡]	 Text / Goto
 [≡o] [=o]/P↔P	 Back / Return
 Picture Size	 Picture / Format



