




 
 



 


 





 









 



 





 









 



 

 



 



 

 

 




Originale		Sostituto		Originale		Sostituto	
	Power		Power		Menu		Menu
	Sleep / Timer		Sleep		Up / P+		Up
	Sleep / Timer		Shift + AV		Up / P+		Ch +
	Display		Info		Down / P-		Down
	Mute		Mute		Down / P-		Ch -
	1		1		Right / Vol+		Right
	2		2		Right / Vol+		Vol +
	3		3		Left / Vol-		Left
	4		4		Left / Vol-		Vol -
	5		5		Enter		Ok
	6		6		Input Select		AV
	7		7		Text / Mix		Text
	8		8		Normal		Smart
	9		9		Skip		Media
	0		0		Audio 1/2		Dual
	P↔P		Back		Status		D. Menu
	P↔P		Pre Ch		Red		Red





Originale		Sostituto		Originale	Sostituto
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		
	Picture Size		Eject		

