



| Originale | | Sostituto | | Originale | | Sostituto | |
|-----------|-------------|-----------|----------------|-----------|--------------|-----------|---------------|
| | Power | | Power | | 3 | | 3 |
| | Clock/Timer | | AV | | 4 | | 4 |
| | Sleep | | Sleep | | 5 | | 5 |
| | Play/Rec | | Shift + AV | | 6 | | 6 |
| | Auto Off | | Shift + Power | | 7 | | 7 |
| | Quick OSD | | Info | | 8 | | 8 |
| | Dimmer | | Shift + Mute | | 9 | | 9 |
| | H.Bass | | List | | 0 | | 0 |
| | Subwoofer | | Shift + List | | ≥10 | | Guide |
| | Sound | | Dual | | PGM | | Shift + Sleep |
| | A.Only | | Shift + Dual | | Group | | Red |
| | Surround | | Shift + Subt | | Repeat | | Text |
| | M.Re-Master | | Subt | | Play Mode | | Shift + Play |
| | Disc | | Pre Ch | | Stop | | Stop |
| | All Disc | | Shift + Pre Ch | | Quick Replay | | Green |
| | 1 | | 1 | | M-Skip | | Yellow |
| | 2 | | 2 | | Pause | | Pause |





| Originale | Sostituto |
|-----------------------------|-----------------|
| TUNER / AUX | Smart |
| TAPE <> | Media |
| Rec | Rec |
| DVD/CD Play | Play |
| Top Menu / Direct Navigator | D. Menu |
| Menu / Play List | Menu |
| Up | Up |
| Left | Left |
| Enter | Ok |
| Right | Right |
| Down | Down |
| Functions | Options |
| Return | Back |
| Angle / Page | Format |
| I<< / REW | I<< |
| Setup | Shift + Options |
| >>I / FF | >>I |

| Originale | Sostituto |
|----------------|-----------|
| Cancel | Exit |
| << Slow/Search | << |
| Slow/Search >> | >> |
| Muting | Mute |
| Volume- | Vol - |
| Volume+ | Vol + |

