














 








 











 







 



 







 







 







Originale		Sostituto		Originale		Sostituto	
	Power		Power		Menu		Menu / Home
	TV		Shift + 1		Left		Left
	Tuner/Band		Shift + 6		Enter / Set		OK
	FM Mode		TV/Radio /		Right		Right
	DVD/CD		Shift + 3		OSD		Smart / List
	DVD/CD		Shift + 2		Down		Down
	I<</Skip Down		I<< / Preset-		Return		Back / Return
	Power VCR		Shift + Power		Angle		Info / Angle
	>>I / Skip Up		>>I / Preset+		RDS		Shift + AV / Input / RDS
	TV / AV		AV / Input / RDS		Timer		Sleep / Timer
	<< Slow/Search		<< / Tune-		Setup		Setup / OPT /
	Slow/Search >>		>> / Tune+		Audio		Audio / Lang I/II
	Stop		Stop / Hold		Subtitle		Subtitle / EQ
	Pause		Pause / Step / Freeze		Play Mode		Picture / Format
	Play		Play / Slow		1		1
	Top Menu		D.Menu / Top		2		2
	Up		Up		3		3





Originale	Sostituto
Display	Display / Media
4	4
5	5
6	6
A-B Repeat	Yellow / YouTube / Repeat
7	7
8	8
9	9
Repeat	Green / APP / Repeat
Cancel	Exit / Cancel / Clear
0	0
-/-->10	Guide / EPG / -/--
Position	CH+ / Page+
Center Focus	CH- / Page-
Subwoofer	Shift + Eject / Surround
D.MIX	Blue / Prime Video / Random
Dolby PL	Sound / Title

Originale	Sostituto
CH Select	Red / Netflix / Search
SFC	Zoom / Size
Test	Text / Goto
Muting	Mute / Dimmer
Super Surround	Eject / Surround
Vol-	Vol-
Vol+	Vol+

