 

 




 








 





 

 

 




Originale	Sostituto
 Power	 Power
 Power Tv	 Shift + Power
 Vol+ Tv	 Shift + Vol+
 DVD	 Shift + 2
 TV/AV Tv	 TV/Radio /
 Vol- Tv	 Shift + Vol-
 FM	 Shift + 5
 1	 1
 2	 2
 3	 3
 EXT-IN	 Eject / Surround
 4	 4
 5	 5
 6	 6
 One Touch Play	 Display / Media
 7	 7
 8	 8

Originale	Sostituto
 9	 9
 Vol+	 Vol+
 Cancel	 Exit / Cancel / Clear
 0	 0
 +10	 Guide / EPG / -/-
 Vol-	 Vol-
 I<</Skip Down	 I<< / Preset-
 >>/Skip Up	 >>I / Preset+
 << Slow Search	 << / Tune-
 Slow Search >>	 >> / Tune+
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Top Menu/Direct Navigator	 Smart / List
 Up	 Up
 Menu/Play List	 Menu / Home
 Left	 Left





Originale		Sostituto	
	Enter		OK
	Right		Right
	Functions		Info / Angle
	Down		Down
	Return-Setup		Back / Return
	SW.Level		Zoom / Size
	EQ		Subtitle / EQ
	C.Focus		Sound / Title
	S.SRD/PLII		Picture / Format
	FL Display/Sleep		Sleep / Timer
	Test		Text / Goto
	Play Mode/-CH Select		CH- / Page-
	Muting		Mute / Dimmer

Originale		Sostituto	

