



Originale	Sostituto
	Power
	Mute / Dimmer
	Play / Slow
	Pause / Step / Freeze
	Stop / Hold
	<< / Tune-
	>> / Tune+
	I<< / Preset-
	>>I / Preset+
	Sound / Title
	Audio / Lang I/II
	Subtitle / EQ
	Eject / Surround
	Picture / Format
	Sleep / Timer
	TV/Radio /
	D.Menu / Top

Originale	Sostituto
	Setup / OPT /
	Text / Goto
	AV / Input / RDS
	Menu / Home
	Up
	Info / Angle
	Left
	OK
	Right
	Exit / Cancel / Clear
	Down
	Back / Return
	Vol+
	Smart / List
	CH+ / Page+
	Vol-
	Display / Media





	Originale	Sostituto	
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/-->10		Guide / EPG / -/--
	0		0
	Repeat		Green / APP / Repeat
	A-B Repeat		Yellow / YouTube / Repeat
	Power VCR		Shift + Power
	Play Mode		Shift + Play /
	Super Surround		Shift + Sound / Title
	Audio Only		Shift + Audio / Lang I/II

	Originale	Sostituto	
	Dolby PL		Shift + Subtitle / EQ
	FM Mode		Shift + TV/Radio / Program
	D.MIX		Shift + D.Menu / Top Menu
	Group		Shift + Setup / OPT / Tools
	RDS		Shift + AV / Input / RDS
	Center Focus		Shift + OK
	Position		Shift + Smart / List
	DVD/CD		Shift + 2
	Tuner/Band		Shift + 6

