









 













Originale	Sostituto
Power	Power
Power Tv	+ Shift + Power
AV Input Tv	AV / Input / RDS
Vol+ Tv	Vol+
Vol- Tv	Vol-
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Cancel	+ Shift + Exit / Cancel / Clear
Audio	Audio / Lang I/II

Originale	Sostituto
Open/Close	Eject / Surround
Status	TV/Radio /
PIP	Zoom / Size
Internet	Smart / List
<< Search	<< / Tune-
Play	Play / Slow
Search >>	>> / Tune+
I<< Skip	I<< / Preset-
Pause	Pause / Step / Freeze
Skip >>I	>>I / Preset+
Stop	Stop / Hold
Pop Up Menu	Menu / Home
EXit	Exit / Cancel / Clear
Option	Setup / OPT /
Return	Back / Return
Top Menu	D.Menu / Top
Netflix	Shift + Red / Netflix / Search





Originale	Sostituto
 Home	 Shift + Menu /
 Up	 Up
 Down	 Down
 Left	 Left
 Right/ >	 Right
 OK	 OK
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

Originale	Sostituto

