





 











 







 


 














 





 







 



Originale	Sostituto
 Power	 Power
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Rec	 Rec / Rec Mode
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 ([ / ])	 Zoom / Size
 *	 D.Menu / Top
 [ <> ]	 Picture / Format
 TV GUIDE	 Guide / EPG / -/--
 SEARCH	 Shift + Red / Netflix / Search
 SOURCES	 AV / Input / RDS
 SMART TV	 Smart / List
 HOME	 Menu / Home
 TV EXIT	 Exit / Cancel / Clear
Red	Red / Netflix / Search

Originale	Sostituto
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 INFO	 Info / Angle
 OPTIONS	 Setup / OPT / Setup
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 BACK	 Back / Return
 Down	 Down
 MULTIVIEW	 Display / Media
 Vol+	 Vol+
 LIST	 Shift + Smart / List
 CH+	 CH+ / Page+
 Vol-	 Vol-
Mute	Mute / Dimmer





Originale		Sostituto		Originale		Sostituto	
	CH-		CH- / Page-				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	Subtitle		Subtitle / EQ				
	0		0				
	Text		Text / Goto				

