

 





 

 





 



 

 

 

 

 







 




 



 














Originale	Sostituto
 Power	 Power
 Ambilight	 D.Menu / Top
 Sources	 AV / Input / RDS
 Settings	 Setup / OPT /
 Top Picks	 Picture / Format
 Search	 TV/Radio /
 Exit/TV	 Exit / Cancel / Clear
 Tv Guide	 Guide / EPG / -/-
 Windows	 Display / Media
 List	 Smart / List
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 ←	 Back / Return
 +	 Info / Angle

Originale	Sostituto
 Home	 Menu / Home
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Vol+	 Vol+
 Netflix	 Shift + Red / Netflix / Search
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6





Originale	Sostituto	Originale	Sostituto
7	7	AUX - HDD	7
8	8	USB	8
9	9	BLUETOOTH	9
SUBTITLE	Subtitle	EQ	Subtitle / EQ
0	0	HDMI - BAT	0
TEXT	Text	GOTO	Text / Goto
Stop	Stop	HOLD	Stop / Hold
Pause	Pause	STEP - FREEZE	Pause / Step / Freeze
Rec	Rec	REC MODE	Rec / Rec Mode
<<	<<	TUNE-	<< / Tune-
Play	Play	SLOW	Play / Slow
>>	>>	TUNE+	>> / Tune+

Originale	Sostituto

