




 
 



 

 

 
 
 

 

 


 


 




Originale		Sostituto		Originale		Sostituto	
	Power		Power		Left		Left
	Red/Rec/Instant		Red		Vol+		Vol +
	Green/<<		Green		Vol-		Vol -
	Yellow/Stop		Yellow		Mute		Mute
	Blue/play		Blue		P+		Ch +
	White/>>/□		>>		P-		Ch -
	>◆		D. Menu		1		1
	[]		Guide		2		2
	[o]/Timer		Sleep		3		3
	[?]		Eject		4		4
	[◆]		Format		5		5
	[≡]/Text		Text		6		6
	Menu		Menu		7		7
	OK		Ok		8		8
	Up		Up		9		9
	Down		Down		0		0
	Right		Right		P<P		Pre Ch









Originale	Sostituto
 [i+]	 Info
 I-II	 Dual
 [> <]	 Subt
 [1 2]	 3D
 []→	 AV
 Smart	 Smart
 [] Smart	 Media
 [<>]	 Back
 [-o-]/Active Control	 Options

Originale	Sostituto





Originale		Sostituto		Originale		Sostituto	
	Power		Power		Vol-		Vol -
	Red/Rec/Instant		Red		Mute		Mute
	Green/Left		Green		P+		Ch +
	Yellow/Stop		Yellow		P-		Ch -
	Blue/Play		Blue		1		1
	White/Right		>>		2		2
	[o]/Timer		Sleep		3		3
	[?]		Eject		4		4
	[♦]		Format		5		5
	[≡]/Text		Text		6		6
	Menu		Menu		7		7
	OK		Ok		8		8
	Up		Up		9		9
	Down		Down		0		0
	Right		Right		P<P		Pre Ch
	Left		Left		[i+]		Info
	Vol+		Vol +		I-II		Dual




 
 








Originale		Sostituto	
	[> <]		Subt
	[1 2]		3D
	[]→		AV
	♪ Smart		Smart
	[] Smart		Media
	[<>]		Back
	[-o-]/Active Control		Options

Originale		Sostituto	





Originale		Sostituto		Originale		Sostituto	
	Power		Power		Vol-		Vol -
	Red/Rec/Instant		Red		Mute		Mute
	Green/Left		Green		P+		Ch +
	Yellow/Stop		Yellow		P-		Ch -
	Blue/Play		Blue		1		1
	White/Right		>>		2		2
	[o]/Timer		Sleep		3		3
	[?]		Eject		4		4
	[♦]		Format		5		5
	[≡]/Text		Text		6		6
	Menu		Menu		7		7
	OK		Ok		8		8
	Up		Up		9		9
	Down		Down		0		0
	Right		Right		P<P		Pre Ch
	Left		Left		[i+]		Info
	Vol+		Vol +		I-II		Dual





Originale		Sostituto		Originale		Sostituto	
	[> <]		Subt				
	[<2]		3D				
	[]->		AV				
	♪ Smart		Smart				
	[] Smart		Media				
	[<>]		Back				
	[-o-]/Active Control		Options				

