



Originale	Sostituto
RC / Remote	Smart
M / Menu	Menu
Power	Power
F / Favourites	Pre Ch
E / Exit	Exit
i / Info	Info
⊖ / Timer	Sleep
⊖ / Timer	AV
TV	TV/R
Up / P+	Up
Up / P+	Ch +
Down / P-	Down
Down / P-	Ch -
Right / Vol+	Right
Right / Vol+	Vol +
Left / Vol-	Left
Left / Vol-	Vol -

Originale	Sostituto
OK	Ok
Mute	Mute
A / Audio	Dual
R / Radio	Shift + TV/R
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0

