
 
 











Originale	Sostituto
 Eject	 Eject / Surround
 Standby/On	 Power
 Menu	 Menu / Home
 Status/Exit	 Exit / Cancel / Clear
 Clear	 Shift + Exit / Cancel / Clear
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Sleep	 Sleep / Timer
 0	 0
System	Smart / List

Originale	Sostituto
 Record/OTR	 Rec / Rec Mode
 Up	 Up
 Play	 Play / Slow
 > </Still	 Pause / Step / Freeze
 <<	 << / Tune-
 Left	 Left
 Right	 Right
 >>	 >> / Tune+
 P+	 CH+ / Page+
 Stop	 Stop / Hold
 Down	 Down
 Vol+	 Vol+
 P-	 CH- / Page-
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Red/SV/V+	 Red / Netflix / Search
Green/Smart	Green / APP / Repeat





Originale		Sostituto	
 SMART PICTURE	Green/Smart		Picture / Format
	Yellow		Yellow / YouTube / Repeat
 INDEX	Blue/Index		Blue / Prime Video / Random
	[=i]		Info / Angle
	Text		Text / Goto
	[=?]		D.Menu / Top
	[=◆]		Zoom / Size
	[=x]		TV/Radio /
	[=o]		Setup / OPT /
	[=+]		AV / Input / RDS

Originale		Sostituto	

