



 



 
 

 
 
 


 
 






 



 
 


 
 


 




 






 



 

 









 







Originale		Sostituto		Originale		Sostituto	
	STANDBY/ON		Power		TOP MENU		Shift + Menu
	OPEN CLOSE		Eject		MENU		Menu
	AUDIO		Dual		HOME MENU		D. Menu
	SUBTITLE		Subt		RETURN		Back
	ANGLE		Sleep		UP		Up
	1		1		DOWN		Down
	2		2		RIGHT		Right
	3		3		LEFT		Left
	4		4		ENTER		Ok
	5		5		<< / <   / <		<<
	6		6		PLAY		Play
	7		7		> /   > / >>		>>
	8		8		I<<		I<<
	9		9		PAUSE		Pause
	0		0		STOP		Stop
	DVD/USB		Media		>>I		>>I
	CLEAR		Exit		USB/REC		Rec





Originale	Sostituto	Originale	Sostituto
 PLAY MODE	 +  Shift + Play		
 ZOOM	 +  Shift + Eject		
 DISPLAY	 Info		

