



 
 
 

 
 
 

 
 






 


 







Originale	Sostituto
 Standby / On	 Power
 BD	 Shift + 1
 DVD	 Shift + 2
 DVR / BDR	 Shift + 3
 HDMI	 Shift + 4
 TV	 Shift + 5
 CD	 Shift + 6
 NET	 Shift + 7
 ADPT	 Shift + 8
 iPod / USB	 Shift + 9
 SAT / CBL	 Shift + Guide
 MHL	 Shift + 0
 TUNER	 Shift + Pre Ch
 Input Select ↶	 Ch -
 Input Select ↷	 Ch +
 i / Status	 Info
 Volume+	 Vol +

Originale	Sostituto
 Volume-	 Vol -
 Mute	 Mute
 Audio	 Media
 Video	 Smart
 Tools Menu	 Options
 Home Menu	 Menu
 iPod Ctrl.	 D. Menu
 Return	 Back
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Features PHASE	 Shift + 3D
 Features PQLS	 Shift + Options
 Features ECO	 3D
 MPX	 Shift + Pause





Originale		Sostituto		Originale		Sostituto	
	Pause		Pause		Adv. Surr.		Subt
	BAND	+	Shift + Play		3		3
	Play		Play		4		4
	PTY	+	Shift + Stop		Signal Sel.		AV
	Stop		Stop		MCACC		Eject
	Preset -	+	Shift + I<<		5		5
	I<<		I<<		6		6
	Preset+	+	Shift + >>I		CH. Level		Guide
	>>I		>>I		7		7
	Tune-	+	Shift + <<		Speakers		List
	<<		<<		Dimmer		Blue
	Tune+	+	Shift + >>		8		8
	>>		>>		9		9
	Auto / ALC /		TV/R		Sleep		Sleep
	1		1		HDMI Out	+	Shift + AV
	Standard		Format		0		0
	2		2		Class		Yellow





Originale		Sostituto	
	+ Favorite		Pre Ch
	Audio / THX		Dual
	Disp / Auto	+	Shift + Info
	Repeat	+	Shift + Text
	Shuffle		Text

