



| Originale | Sostituto |
|---|--|
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  Timer |  Sleep / Timer |
|  0 |  0 |
|  Game |  Smart / List |
|  Page Up |  Shift + CH+ / |
|  EPG |  Guide / EPG / -/-- |
|  Recall |  Back / Return |

| Originale | Sostituto |
|--|--|
|  Page Down |  Shift + CH- / |
|  Fav |  Fav / Marker / PC |
|  Info |  Info / Angle |
|  Up / CH+ |  CH+ / Page+ |
|  Up / CH+ |  Up |
|  Left / Vol- |  Vol- |
|  Left / Vol- |  Left |
|  OK |  OK |
|  Right / Vol+ |  Vol+ |
|  Right / Vol+ |  Right |
|  Menu |  Menu / Home |
|  Down / CH- |  Down |
|  Down / CH- |  CH- / Page- |
|  Exit |  Exit / Cancel / Clear |
|  Red / Scan |  Red / Netflix / Search |
|  Green / Zoom |  Zoom / Size |
|  Green / Zoom |  Green / APP / Repeat |



