









 





 

 

 


















 


 







 














Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 Nicam/A2	 Shift + Audio / Lang I/II
 Sleep	 Sleep / Timer
 Aspect	 Shift + Picture / Format
 Media	 Shift + Display / Media
 Display	 Display / Media
 Auto	 Smart / List
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 DTV	 D.Menu / Top
 Source	 AV / Input / RDS
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down

Originale	Sostituto
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide / EPG / -/--
 Recall	 Back / Return
 CH+	 CH+ / Page+
 Info	 Info / Angle
 Audio	 Audio / Lang I/II





Originale	Sostituto
Vol+	Vol+
CH-	CH- / Page-
FAV	Fav / Marker / PC
Tv/Radio	TV/Radio /
Vol-	Vol-
Text	Text / Goto
EPG	Guide / EPG / -/--
Subtitle	Subtitle / EQ
Index	Setup / OPT /
<</Hold	<< / Tune-
<</Hold	Shift + Stop /
Size	Zoom / Size
>>	>> / Tune+
I<</Reveal	I<< / Preset-
>>I/Subpage	>>I / Preset+
Play	Play / Slow
Pause	Pause / Step / Freeze

Originale	Sostituto
Stop	Stop / Hold
Rec/Repeat	Rec / Rec Mode
Rec/Repeat	Shift + Green / APP /
T-Shift	Eject / Surround
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Cyan	Blue / Prime Video / Random

