

 
 


 
 
 

 
 





 




 
 
 

 
 
 



 


 

 
 

 




 

 





 


 




 

 








Originale	Sostituto
	 Power
	 Info
	 Mute
	 Dual
	 Ok
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Shift + Guide
	 Exit

Originale	Sostituto
	 Menu
	 Red
	 Green
	 Yellow
	 Blue
	 Up
	 Down
	 Right
	 Left
	 Ch +
	 Ch -
	 Vol +
	 Vol -
	 Play
	 Pause
	 Stop
	 <<





Originale		Sostituto	
	>>		>>
	[TV]		TV/R
	D-Menu		Smart
	TV		Media
	AV		AV
	P<P		Pre Ch
	PP		D. Menu
	[≡]		Text
	[≡o]		Subt
	[≡+]		Format
	[≡x]		3D
	[≡◆]/Wide		Shift + Format
	[≡?]		Options
	[≡i]/Guide		Guide
	[::]/Subtitle		Back

Originale		Sostituto	



 


 

 












 
 


Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Stop	 Stop
 1	 1	 Play	 Play
 2	 2	 Pause	 Pause
 3	 3	 D-Menu	 Smart
 4	 4	 <<	 <<
 5	 5	 >>	 >>
 6	 6	 I<<	 I<<
 7	 7	 >>I	 >>I
 8	 8	 Time	 Shift + AV
 9	 9	 Zoom	 Shift + Eject
 0	 0	 Program	 Sleep
 -/--/+10	 Guide	 Search Mode	 AV
 Exit	 Exit	 Repeat	 Text
 Red/↑/Return	 Red	 A-B	 Shift + Play
 Green/↓/Subtitle	 Green	 C	 Yellow
 Yellow/Audio	 Shift + Yellow	 Title	 Info
 Blue/Angle	 Blue	 Display	 Shift + Info

Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Stop	 Stop
 1	 1	 Play	 Play
 2	 2	 Pause	 Pause
 3	 3	 D-Menu	 Smart
 4	 4	 <<	 <<
 5	 5	 >>	 >>
 6	 6	 I<<	 I<<
 7	 7	 >>I	 >>I
 8	 8	 Time	 Shift + AV
 9	 9	 Zoom	 Shift + Eject
 0	 0	 Program	 Sleep
 -/--/+10	 Guide	 Search Mode	 AV
 Exit	 Exit	 Repeat	 Text
 Red/↑/Return	 Red	 A-B	 Shift + Play
 Green/↓/Subtitle	 Green	 C	 Yellow
 Yellow/Audio	 Shift + Yellow	 Title	 Info
 Blue/Angle	 Blue	 Display	 Shift + Info





Originale	Sostituto
 Open/Close	 Eject
 Menu	 Menu
 Select	 Ok
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute

Originale	Sostituto

