




 


 



 



 

 
 
 
 












 






Originale	Sostituto
 Standby	 Power
 Source	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Fav	 Pre Ch
 Recall	 Back
 P.Mode	 Format
 S.Mode	 Shift + Dual
 Sleep	 Sleep

Originale	Sostituto
 Tv/Radio	 TV/R
 Display	 Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Ok	 Ok
 Menu	 Menu
 Exit	 Exit
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Epg	 Guide
 Media	 Media
 Ch+	 Ch +
 Ch-	 Ch -
 Rec	 Rec





Originale	Sostituto	Originale	Sostituto
T.SHIFT	T.Shift	SETTINGS OPT	Options
AUDIO I/II	I/II Audio	SOUND DUAL	Dual
ASPECT SIZE	Size/Aspect	ECO 3D	3D
TEXT	Text	REPEAT TEXT	Text
REVEAL	Reveal	E-MANUAL D.MENU	D. Menu
SUBPAGE	Subpage	HOME SMART	Smart
HOLD	Hold	ZOOM ▲	Eject
SUBTITLE	Subtitle	AD SUBT	Subt
RECLIST INDEX	Index/Rec List	DISC NAV LIST	List
▶▶	Play	PLAY MODE ▶	Play
⏸	Pause	⏸	Pause
■	Stop	■	Stop
◀◀	<<	◀◀	<<
▶▶	>>	▶▶	>>
◀◀	I<<	◀◀	I<<
◀◀	>>I	▶▶	>>I
Red	Red	A	Red

Originale	Sostituto	Originale	Sostituto
Green	Green	B	Green
Yellow	Yellow	C	Yellow
Blue	Blue	D	Blue

