





 


 












 
 

 



 




 


 








 






 




Originale	Sostituto
 Power	 Power
 DTV / ATV	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 - / +	 Shift + Guide
 Recall	 Back
 P.Mode	 Shift + Format
 S.Mode	 Dual
 Aspect	 Format

Originale	Sostituto
 Still	 Pause
 P -	 Ch -
 P +	 Ch +
 V -	 Vol -
 V +	 Vol +
 Sleep	 Sleep
 Mute	 Mute
 MTS	 Shift + Media
 Menu	 Menu
 Source	 AV
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 Enter	 Ok
 Exit	 Exit
 i	 Info





Originale		Sostituto		Originale		Sostituto	
	Red		Red		TV / Radio		TV/R
	Green		Green		List		List
	Yellow		Yellow		FAV		Pre Ch
	Blue		Blue		EPG		Guide
	Text / <<		Text		Rec		Rec
	Text / <<		<<		Rec Menu		Shift + Rec
	Hold / >>		>>		T.Shift		Shift + Smart
	Hold / >>		Shift + Pause		USB		Media
	Mix / I<<		I<<				
	Mix / I<<		Shift + Text				
	Timer / >>I		>>I				
	[≡] / Play/Pause		Play				
	[≡] / Play/Pause		Shift + Info				
	Size / Stop		Stop				
	Size / Stop		Eject				
	[ ? ]		D. Menu				
	Subtitle		Subt				

