 


 
 



 




 

 


 
 
 
 
 

 






 











 

 

 
 
 




 
 


 
 

 

 


 





Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Up	 Up
 16:9 Wide	 Format	 Right	 Right
 Mute	 Mute	 Down	 Down
 1	 1	 Left	 Left
 2	 2	 OK	 Ok
 3	 3	 Vol +	 Vol +
 4	 4	 Vol -	 Vol -
 5	 5	 Menu	 Menu
 6	 6	 Source	 AV
 7	 7	 CH +	 Ch +
 8	 8	 CH -	 Ch -
 9	 9	 Info	 Info
 0	 0	 Sleep	 Sleep
 F1	 Shift + 1	 Recall	 Back
 Guide	 Smart	 L / R	 Shift + Dual
 Smart S	 Dual	 Play / Index	 Play
 Smart P	 Options	 Pause / Zoom	 Pause





Originale		Sostituto		Originale	Sostituto
	Pause / Zoom		Eject		
	Stop / Reveal		Stop		
	TTX		Text		
	I<< / Hold		I<<		
	>>I / List		>>I		
	<< / Language		<<		
	>> / Radio		>>		
	>> / Radio		TV/R		
	Red / Rec		Red		
	Red / Rec		Rec		
	>>I / List		List		
	Green / Subtitle		Green		
	Green / Subtitle		Subt		
	Yellow / FAV		Yellow		
	Yellow / FAV		Pre Ch		
	Blue / EPG		Blue		
	Blue / EPG		Guide		

