



 

 





 



 









 

 









 











 



 

 



 




 







Originale	Sostituto	Originale	Sostituto
 PWR	 Power	 Yellow/FAV	 Yellow / YouTube / Repeat
 Tv/Rad	 TV/Radio /	 Blue/A-Z	 Blue / Prime Video / Random
 Text	 Text / Goto	 Menu	 Menu / Home
 1	 1	 EPG	 Guide / EPG / -/--
 2	 2	 Info	 Info / Angle
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 OK	 OK
 8	 8	 Vol+	 Vol+
 9	 9	 Vol-	 Vol-
 0	 0	 Exit	 Exit / Cancel / Clear
 Back	 Back / Return	 Page+	 CH+ / Page+
 Mute	 Mute / Dimmer	 Page-	 CH- / Page-
 Red/Opt	 Red / Netflix / Search	 Pause	 Pause / Step / Freeze
 Green/AV+	 Green / APP / Repeat	 Play	 Play / Slow

Originale	Sostituto	Originale	Sostituto
 PWR	 DIMMER MUTE	 SHIFT	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP - FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG UII	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 SIZE	 TIMER	 TV RADIO
 PICTURE	 ZOOM	 SLEEP	 RDS
 TOP MENU	 OPT-TOOLS	 GOTO	 AV INPUT
 D.MENU	 SETUP	 TEXT	 TV INPUT
 HOME	 ANGLE	 MENU	 INFO
 OK	 OK	 OK	 OK
 CLEAR	 EXIT	 CANCEL	 RETURN
 VOL+	 VOL+	 VOL+	 VOL+
 VOL-	 VOL-	 VOL-	 VOL-
 TV	 DVD	 CD - STB	 CD - STB
 VIDEO	 TAPE	 TUNER	 TUNER
 AUX - HDD	 USB	 BLUETOOTH	 BLUETOOTH
 GUIDE EPG	 HDMI - BAT	 FC	 FC
 NETFLIX	 APP	 YouTube	 Prime Video
 SEARCH	 REPEAT	 REPEAT A-B	 RANDOM





	Originale	Sostituto
	<<	 << / Tune-
	Stop	 Stop / Hold
	>>	 >> / Tune+
	Rec	 Rec / Rec Mode
	Slow	 +  Shift + Play /
	List	 Smart / List
	A-B	 D.Menu / Top
	Mark	 Fav / Marker / PC
	Jump	 Subtitle / EQ
	PIP	 Zoom / Size
	Swap	 Setup / OPT /
	Move	 Display / Media
	Sleep	 Sleep / Timer

	Originale	Sostituto

