



Originale		Sostituto		Originale		Sostituto	
	Power		Power		8		8
	Open / Close		Eject		9		9
	TV / DTV		TV/R		-/--		Shift + Guide
	Line		AV		0		0
	DVD		Media		PRE		Pre Ch
	TTX		Text		Vol +		Vol +
	PIP ON / OFF		Shift + Power		Vol -		Vol -
	PIP Swap		Shift + Back		Prog +		Ch +
	PIP Source		Shift + AV		Prog -		Ch -
	PIP Sound		Shift + Dual		M/S		Subt
	1		1		Still		Shift + Pause
	2		2		Sleep		Sleep
	3		3		TV Menu		Menu
	4		4		P.STD		Format
	5		5		S.STD		Shift + Subt
	6		6		P.Size		Shift + Format
	7		7		Exit / Cancel		Exit





Originale	Sostituto
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 Enter	 Ok
 Mute	 Mute
 Display	 Shift + Info
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 <<<	 <<<
 >>>	 >>>
 I<<<	 I<<<
 >>>I	 >>>I
 Red / Setup	 Red
 Green / Title	 Green
 Yellow / Menu	 Yellow

Originale	Sostituto
 Blue	 Blue
 Index Repeat	 Shift + Text
 MIX A-B	 Shift + TV/R
 L/F Audio	 Dual
 Size Subtitle	 3D
 Reveal Goto	 Back
 Hold / Program / Menu	 Shift + Menu
 Prepage / Angle / List	 List
 Next Page / Surround / Opt	 Options
 Subpage / Zoom / EPG	 Guide
 Store / Clear / i	 Shift + Exit
 Store / Clear / i	 Info

