



	Originale	Sostituto		Originale	Sostituto
	Power On		Power		Vol -
	Power Off		Shift + Power		Mute
	1		1		Play
	2		2		I<<
	3		3		>>I
	4		4		Pause
	5		5		Stop
	6		6		Yellow
	7		7		Red
	8		8		Green
	9		9		Menu
	0		0		Up
	Ten/+10		Guide		Down
	Memory		Pre Ch		Right
	CH+		Ch +		Left
	CH-		Ch -		Ok
	Vol+		Vol +		Shift + 1





Originale	Sostituto
Tun	Shift + 2
Tape	Shift + 3
EXT	Shift + 4
V1/DVD	Shift + 5
V2	Shift + 6
V3	Shift + 7
V4	Shift + 8
V5	Shift + 9
EQ	Smart
DYN	Media
Rec	Rec
Zone	Shift + Smart
Sur+	Shift + Media
2 CH	List
PL C	Options
PL M	3D
5 CH	Dual

Originale	Sostituto
7 CH	Subt
Display	Info
Tape 2	Exit
Phono	Back
Tone	Text
D-SLT	D. Menu
Scan	Shift + Play
PTY	<<
P-Tun	>>
TP	Shift + Pause
TA	Shift + Stop
Aspect	Format
Disp	Shift + Info
PIP	Sleep
POP	TV/R
Output	AV
Power	Blue












 

 


 


 

 







 


 








Originale		Sostituto		Originale		Sostituto	
	Power On		Power		Play		Play
	Power Off		Shift + Power		I<<		I<<
	1		1		>>I		>>I
	2		2		Pause		Pause
	3		3		Stop		Stop
	4		4		Menu		Menu
	5		5		Up		Up
	6		6		OSD		Back
	7		7		Down		Down
	8		8		-/Back		Left
	9		9		-/Back		<<
	0		0		+/Forward		Right
	Ten (+10)		Guide		+/Forward		>>
	Clear (X)		Exit		Enter		Ok
	Vol+		Vol +		Search-		Ch -
	Vol-		Vol -		Search+		Ch +
	Mute		Mute		Random (DYN)		TV/R






 









 

 













 


 


 



 
 


 

 
 
 



Originale		Sostituto	
	PAL (Rec)		Format
	HD Mode		3D
	DIM (SUR+)		AV
	Prog (2CH)		Sleep
	Screen (PL C)		Smart
	Title (PL M)		Media
	Prog-Scan		Options
	Open (7CH)		Eject
	Display		Info
	Audio		Dual
	Angle		List
	Subtitle		Subt
	Zoom		Shift + Eject
	Resume		Shift + Right
	Repeat		Text
	A-B		D. Menu
	Slow		Shift + Play

Originale		Sostituto	
	Goto		Shift + Left
	Power		Blue





Originale		Sostituto		Originale		Sostituto	
	Power On		Power		I<<		I<<
	Power Off		Shift + Power		>>I		>>I
	1		1		Pause		Pause
	2		2		Stop		Stop
	3		3		Open (ENT)		Ok
	4		4		Open (ENT)		Eject
	5		5		Search-		Ch -
	6		6		Search+		Ch +
	7		7		Disc 1		Shift + 1
	8		8		Disc 2		Shift + 2
	9		9		Disc 3		Shift + 3
	0		0		Disc 4		Shift + 4
	TEN (+10)		Guide		Disc 5		Shift + 5
	Vol+		Vol +		Program (2CH)		Sleep
	Vol-		Vol -		Random (PL C)		TV/R
	Mute		Mute		Repeat (PL M)		Text
	Play		Play		Disc+ (7CH)		>>





	Originale	Sostituto	
	Display (DISP)		Info
	Scan		Smart
	Time (PTY)		Pre Ch
	A-B (P-Tun)		D. Menu
	Review (TP)		Media
	Clear (TA)		Exit
	Power		Blue

	Originale	Sostituto

