



Originale	Sostituto	Originale	Sostituto
 Power	 Power	 CH+	 CH+ / Page+
 Mute	 Mute / Dimmer	 Vol-	 Vol-
 1	 1	 Source	 AV / Input / RDS
 2	 2	 CH-	 CH- / Page-
 3	 3	 Up	 Up
 4	 4	 Left	 Left
 5	 5	 OK	 OK
 6	 6	 Right	 Right
 7	 7	 Exit	 Exit / Cancel / Clear
 8	 8	 Down	 Down
 9	 9	 Menu	 Menu / Home
 PR List	 Smart / List	 Aspect	 Shift + Picture / Format
 0	 0	 Sleep	 Sleep / Timer
 Recall	 Back / Return	 Info/Display	 Info / Angle
 Vol+	 Vol+	 I/II/Nicam	 Shift + Audio / Lang I/II
 P.Mode	 Picture / Format	 DVD/USB	 Shift + 2
 S.Mode	 Sound / Title	 Text	 Text / Goto

Originale	Sostituto	Originale	Sostituto
 Power	 Power	 CH+	 CH+ / Page+
 Mute	 Mute / Dimmer	 Vol-	 Vol-
 1	 1	 Source	 AV / Input / RDS
 2	 2	 CH-	 CH- / Page-
 3	 3	 Up	 Up
 4	 4	 Left	 Left
 5	 5	 OK	 OK
 6	 6	 Right	 Right
 7	 7	 Exit	 Exit / Cancel / Clear
 8	 8	 Down	 Down
 9	 9	 Menu	 Menu / Home
 PR List	 Smart / List	 Aspect	 Shift + Picture / Format
 0	 0	 Sleep	 Sleep / Timer
 Recall	 Back / Return	 Info/Display	 Info / Angle
 Vol+	 Vol+	 I/II/Nicam	 Shift + Audio / Lang I/II
P.Mode	Picture / Format	DVD/USB	Shift + 2
S.Mode	Sound / Title	Text	Text / Goto





Originale	Sostituto
Subtitle	Subtitle / EQ
Size	Zoom / Size
Play/Pause/Index	Play / Slow
Stop/Reveal	Stop / Hold
Step/Subpage	Pause / Step / Freeze
Open/Close/Hol	Eject / Surround
I<</FAV	I<< / Preset-
>>ITv/Radio	Shift + >> /
<</Audio	<< / Tune-
>>/EPG	>> / Tune+
Red/Prog	Red / Netflix / Search
Green/Zoom	Green / APP / Repeat
Yellow/Title	Yellow / YouTube / Repeat
Blue/DVD-Setup	Blue / Prime Video / Random
DVD-Menu	D.Menu / Top
Repeat	Shift + Green / APP / Repeat
A-B	Shift + Yellow / YouTube / Repeat

Originale	Sostituto
DVD-Lang	Audio / Lang I/II

