



Originale		Sostituto		Originale		Sostituto	
	Standby		Power		Down		Down
	Info		Info		Right		Right
	Subtitle		Subt		Left		Left
	Mute		Mute		OK		Ok
	I<<		I<<		Vol+		Vol +
	>>I		>>I		Vol-		Vol -
	Play		Play		1		1
	Pause		Pause		2		2
	<<		<<		3		3
	>>		>>		4		4
	Record		Rec		5		5
	Stop		Stop		6		6
	Menu		Menu		7		7
	Exit		Exit		8		8
	CH+		Ch +		9		9
	CH-		Ch -		0		0
	Up		Up		EPG		Guide





Originale	Sostituto	Originale	Sostituto
Back	Back		
Media	Media		
USB	Smart		
Tv/Radio	TV/R		
Audio	Dual		
TTX	Text		
Timer	AV		
FAV	Pre Ch		
Res	Options		
Red	Red		
Green	Green		
Yellow	Yellow		
Blue	Blue		

Originale	Sostituto

