













Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Page-	 CH- / Page-
 Mute	 Mute / Dimmer	 1	 1
 Pause	 Pause / Step / Freeze	 2	 2
 Menu	 Menu / Home	 3	 3
 Scan	 Smart / List	 4	 4
 Up	 Up	 5	 5
 Info	 Info / Angle	 6	 6
 Left	 Left	 7	 7
 OK	 OK	 8	 8
 Right	 Right	 9	 9
 Exit	 Exit / Cancel / Clear	 0	 0
 Down	 Down	 Red/FAV	 Red / Netflix / Search
 Recall	 Fav / Marker / PC	 Green/SAT	 Green / APP / Repeat
 Vol+	 Vol+	 Yellow/Audio	 Yellow / YouTube / Repeat
 MP	 Display / Media	 Blue/Tv/Radio	 Blue / Prime Video / Random
 Page+	 CH+ / Page+		
 Vol-	 Vol-		

Originale	Sostituto	Originale	Sostituto
 Power	 MUTE	 SHIFT	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP-FREEZE	 HOLD	 REC MODE
 PLAY	 PAUSE	 STOP	 RED
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG VUI	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 SIZE	 TIMER	 TV RADIO
 PICTURE	 ZOOM	 SLEEP	 AV INPUT
 TOP MENU	 OPT-TOOLS	 GOTO	 RDS
 D.MENU	 SETUP	 TEXT	 AV INPUT
 HOME	 ANGLE	 INFO	
 MENU	 OK	 RETURN	 BACK
 CLEAR	 EXIT	 CANCEL	
 LIST	 SMART	 MEDIA	 CH PAGE
 VOL+	 DISPLAY	 TV	 DVD
 VOL-	 TV	 CD- STB	 VIDEO
 1	 2	 3	 TUNER
 4	 5	 6	 AUX - HDD
 7	 8	 9	 USB
8	9	0	BLUETOOTH
9	0	HDMI - SAT	PC
0	HDMI - SAT	FAV MARKER	
Red/FAV	NETFLIX SEARCH	APP REPEAT	
Green/SAT	YouTube REPEAT A-B	Prime Video RANDOM	
Yellow/Audio			
Blue/Tv/Radio			

