



Originale	Sostituto
Power	Power
Mute	Mute / Dimmer
Play	Play / Slow
Pause/[≡]	Pause / Step / Freeze
Stop/[≡+]	Stop / Hold
Rec/[≡◆]	Rec / Rec Mode
<</[≡o]	<< / Tune-
<</[≡i]	<< / Preset-
>> /[≡?]	>>  / Preset+
>>/[≡x]	>> / Tune+
Info	Info / Angle
OI/II/Audio	Audio / Lang I/II
[≡]	Text / Goto
←/<x]	Fav / Marker / PC
1	1
2	2
3	3

Originale	Sostituto
4	4
5	5
6	6
7	7
8	8
9	9
*	Setup / OPT /
0	0
Up	Up
[→]	AV / Input / RDS
Left	Left
OK	OK
Right	Right
Down	Down
Netflix	Shift + Red / Netflix /
You Tube	Shift + Yellow / YouTube /
Vol+	Vol+





Originale		Sostituto		Originale	Sostituto
	Home / Source		Menu / Home		
	P+		CH+ / Page+		
	Vol-		Vol-		
	P-		CH- / Page-		
	Red		Red / Netflix / Search		
	Green		Green / APP / Repeat		
	Yellow		Yellow / YouTube / Repeat		
	Blue		Blue / Prime Video / Random		
	EPG		Guide / EPG / -/--		
	List		Smart / List		
	Q.Menu		D.Menu / Top		












 
 
 



Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause [ /≡ ]	 Pause / Step / Freeze
 Stop/[≡+] ]	 Stop / Hold
 Rec/[≡◆ ]	 Rec / Rec Mode
 <</[≡o ]	 << / Tune-
  <</[≡i ]	  << / Preset-
 >> /[≡? ]	 >>  / Preset+
 >>/[≡x ]	 >> / Tune+
 Info	 Info / Angle
 O) /II/Audio	 Audio / Lang I/II
 [≡ ]	 Text / Goto
 ←/<x ]	 Fav / Marker / PC
 1	 1
 2	 2
 3	 3

Originale	Sostituto
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 *	 Setup / OPT /
 0	 0
 [→ ]	 AV / Input / RDS
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Netflix	 Shift + Red / Netflix /
 YouTube	 Shift + Yellow / YouTube /
 Vol+	 Vol+





Originale	Sostituto
 Home/Source	 Menu / Home
 P+	 CH+ / Page+
 Vol-	 Vol-
 P-	 CH- / Page-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 EPG	 Guide / EPG / -/--
 List	 Smart / List
 Q.Menu	 D.Menu / Top

Originale	Sostituto

