































































 









 


 





 




Originale		Sostituto		Originale		Sostituto	
	Power		Power		8		8
	Mute		Mute / Dimmer		9		9
	Play / [≡]		Play / Slow		Info		Info / Angle
	Pause / [T.S]		Pause / Step / Freeze		0		0
	Stop / [≡]		Stop / Hold		EPG		Guide / EPG / -/-
	Rec / [≡↑]		Rec / Rec Mode		Settings ⚙		Setup / OPT /
	<< / [≡⊖]		<< / Tune-		Settings ⚙		Display / Media
	<< / [≡i]		<< / Preset-		Input		AV / Input / RDS
	>> / [≡?]		>> / Preset+		Up		Up
	>> / [≡X]		>> / Tune+		Left		Left
	1		1		OK		OK
	2		2		Right		Right
	3		3		Down		Down
	4		4		≡		D.Menu / Top
	5		5		Google Assist		Smart / List
	6		6		←		Back / Return
	7		7		Vol+		Vol+





Originale		Sostituto	
	P+		CH+ / Page+
	Vol-		Vol-
	Home Δ		Menu / Home
	P-		CH- / Page-
	Netflix		Shift + Red / Netflix /
	YouTube		Shift + Yellow / YouTube /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	I/II		Audio / Lang I/II
	[≡]		Text / Goto
	Subt		Subtitle / EQ

Originale		Sostituto	

