





 








 



 
 
 




 







 



 
 

 

 

 
 
 

 

 
 

 
 
 

 
 
 
 
 
 
 












 
 


Originale	Sostituto
 Power	 Power
 OK	 OK
 Up	 UP
 Down	 DOWN
 Right	 RIGHT
 Left	 LEFT
 Return	 BACK
 Play	 Play
 Pause	 Pause
 Extra	 MEDIA
 Mute	 MUTE
 Vol+	 VOL +
 Vol-	 VOL -
 Guide	 -/-- / EPG
 CH+	 CH +
 CH-	 CH -
 Home	 VOD

Originale	Sostituto
 Source	 SRC
 TTX/MIX	 TEXT
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 PRE-CH	 P/C / FAV
 Exit	 EXIT
 Info	 INFO
 Menu	 MENU
 Red	 Red (A)





Originale		Sostituto		Originale		Sostituto	
	Green		Green (B)				
	Yellow		Yellow (C)				
	Blue		Blue (D)				
	123		TV/R				
	Tools		OPT+				
	Stop		Stop				
	Rec		Rec				
	<</ <<		Rewind				
	>>/>>		Fast Forward				
	CH List		WIDE				
	AD/Subt.		Subt.				
	E-Manual		Audio				

