







 



Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 [=+]/-/--	 Guide
 Recall/Auto/Pre-C	 Pre Ch
 Mute	 Mute
 Vol+	 Vol +
 Vol-	 Vol -
 P+	 Ch +

Originale	Sostituto
 P-	 Ch -
 [=..]/Source	 AV
 [=i]/Menu	 Menu
 (+)	 Media
 [=?]/Info/[+]	 Info
 Exit	 Exit
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 Enter	 Ok
 TTX/MIX	 Text
 [=o]/Dual I-II	 Dual
 [=◇]	 Format
 [=◇]/Sleep	 Sleep
 Red	 Red
Green	Green





Originale		Sostituto	
	Yellow		Yellow
	Blue/P.Mode		Blue

Originale		Sostituto	

