
























 








 





Originale	Sostituto
 Power	 Power
 Power Tv	 Shift + Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Tv/Radio	 TV/R
 Pre-CH	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute

Originale	Sostituto
 CH+	 Ch +
 CH-	 Ch -
 CH List	 List
 Tv Portal	 Media
 Menu	 Menu
 EPG	 Guide
 Tools	 Options
 Info	 Info
 Return	 Back
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Red	 Red
 Green	 Green





Originale	Sostituto
Yellow	Yellow
Blue	Blue
Text	Text
Audio	Dual
SUB	Subt
Rec	Rec
<<	<<
Pause	Pause
Play	Play
Stop	Stop
>>	>>

Originale	Sostituto

