

 



 

 
 
 


 
 








 


 



 







 

Originale	Sostituto
Power	Power
Source	AV
Open/Close	Eject
Sleep	Sleep
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Dolby PL	Dual
DSP/EQ	Guide
I<<<	I<<<

Originale	Sostituto
>>I	>>I
<<	<<
>>	>>
Stop	Stop
Play	Play
Pause	Pause
Vol+	Vol +
Vol-	Vol -
Mute	Mute
Repeat	Text
Tuning+	Ch +
Tuning-	Ch -
Disc Menu	D. Menu
Menu	Menu
Title Menu	TV/R
Tools	Options
Info	Info





Originale	Sostituto
 Power	 Power
 Function Tv	 AV
 Sleep	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 <<	 <<
 >>	 >>
 Stop	 Stop
 Play	 Play

Originale	Sostituto
 Pause	 Pause
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 CH+	 Ch +
 CH-	 Ch -
 Menu	 Menu
 Tools	 Options
 Info	 Info
 Return	 Back
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Red	 Red



