 

 
 
 

 

 

 

 
 
 
 
 

 

 

 
 
 
 
 

 
 
 
 
 





Originale	Sostituto
 Power	 Power
 Bonusview	 Media
 Open / Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Subtitle	 Subt
 Audio	 Dual
 I<<	 I<<
 >>I	 >>I

Originale	Sostituto
 <<	 <<
 >>	 >>
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 Disc Menu	 D. Menu
 Menu	 Menu
 Popup / Title	 Shift + Menu
 Popup / Title	 List
 Tools	 Options
 Info	 Info
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Return	 Back





Originale		Sostituto		Originale		Sostituto	
	Exit		Exit				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Smart HUB		Smart				
	Search		TV/R				
	Repeat		Text				
	TV Power		Shift + Power				
	TV Source		AV				
	TV Vol +		Vol +				
	TV Vol -		Vol -				
	TV Mute		Mute				
	TV CH +		Ch +				
	TV CH -		Ch -				

