



Originale		Sostituto		Originale		Sostituto	
	Power		Power		Vol+		Vol +
	Source		AV		Vol-		Vol -
	HDMI		Media		P+		Ch +
	1		1		P-		Ch -
	2		2		Home		Smart
	3		3		Menu		Menu
	4		4		Guide		Guide
	5		5		Tools		Options
	6		6		Info		Info
	7		7		Return		Back
	8		8		Exit		Exit
	9		9		Up		Up
	0		0		Down		Down
	TTX/MIX		Text		Right		Right
	PRE-CH		Pre Ch		Left		Left
	Mute		Mute		Red		Red
	CH List		List		Green		Green





Originale		Sostituto		Originale		Sostituto	
	Yellow		Yellow				
	Blue		Blue				
	Dual I-II		Dual				
	Content		D. Menu				
	3D		3D				
	Alarm		TV/R				
	P.Size		Format				
	Subt.		Subt				
	Enter		Ok				
	<</ <<		<<				
	Pause		Pause				
	>>/>>		>>				
	Play		Play				
	Rec		Rec				
	Stop		Stop				

