



Originale	Sostituto
Power	Power
Tv	TV/Radio /
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Enter	OK
PRE-CH	Back / Return
CH LIST	Shift + Smart / List
FAV CH	Fav / Marker / PC
Tools	Setup / OPT /

Originale	Sostituto
Menu	Menu / Home
Return	Shift + Back / Return
Info	Info / Angle
Internet	Smart / List
Exit	Exit / Cancel / Clear
Up	Up
Down	Down
Right	Right
Left	Left
Red	Red / Netflix / Search
Enter	Shift + OK
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Vol+	Vol+
Vol-	Vol-
Mute	Mute / Dimmer





Originale	Sostituto	Originale	Sostituto
Source	AV / Input / RDS		
PR+	CH+ / Page+		
PR-	CH- / Page-		
TTX/MIX	Text / Goto		
Media.P	Display / Media		
Content	Picture / Format		
Guide	Guide / EPG / -/--		
Subt	Subtitle / EQ		
<<	<< / Tune-		
Pause	Pause / Step / Freeze		
>>	>> / Tune+		
Rec	Rec / Rec Mode		
Play	Play / Slow		
Stop	Stop / Hold		

Originale	Sostituto

