 

 














 
 
 
 

 


 
 

 





Originale	Sostituto
 Power	 Power
 Source	 AV
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 PR+	 Ch +
 PR-	 Ch -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Originale	Sostituto
 TV	 TV/R
 Recall	 Pre Ch
 World	 Media
 Menu	 Menu
 Exit	 Exit
 Back	 Back
 i/Info	 Info
 Guide	 Guide
 [≡]/Text	 Text
 */O	 Format
 */O..	 3D
 LANG.	 Dual
 [≡]..	 Subt
 [-O-]	 Options
 Red	 Red
 Green	 Green
 Yellow	 Yellow





Originale	Sostituto
 Blue	 Blue
 Rec	 Rec
 Play	 Play
 Stop	 Stop
 Pause	 Pause
 <<	 <<
 >>	 >>
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Music/Photo/Movi	 Smart
 Q. Menu	 D. Menu

Originale	Sostituto

