 









 
 





























 





 


















Originale	Sostituto	Originale	Sostituto
 Standby	 Power	 TV / Radio	 TV/Radio /
 Mute	 Mute / Dimmer	 Menu	 Menu / Home
 1	 1	 Up	 Up
 2	 2	 Exit	 Exit / Cancel / Clear
 3	 3	 Left	 Left
 EPG	 Guide / EPG / -/--	 OK	 OK
 4	 4	 Right	 Right
 5	 5	 Record	 Rec / Rec Mode
 6	 6	 Down	 Down
 Audio	 Audio / Lang I/II	 Stop	 Stop / Hold
 7	 7	 Vol +	 Vol+
 8	 8	 CH +	 CH+ / Page+
 9	 9	 Vol -	 Vol-
 Subtitle	 Subtitle / EQ	 TTX	 Text / Goto
 Info	 Info / Angle	 FAV	 Fav / Marker / PC
 0	 0	 CH -	 CH- / Page-
 Recall	 Back / Return	 Media	 Display / Media

Originale	Sostituto	Originale	Sostituto
 Standby	 Power	 TV / Radio	 TV/Radio /
 Mute	 Mute / Dimmer	 Menu	 Menu / Home
 1	 1	 Up	 Up
 2	 2	 Exit	 Exit / Cancel / Clear
 3	 3	 Left	 Left
 EPG	 Guide / EPG / -/--	 OK	 OK
 4	 4	 Right	 Right
 5	 5	 Record	 Rec / Rec Mode
 6	 6	 Down	 Down
 Audio	 Audio / Lang I/II	 Stop	 Stop / Hold
 7	 7	 Vol +	 Vol+
 8	 8	 CH +	 CH+ / Page+
 9	 9	 Vol -	 Vol-
 Subtitle	 Subtitle / EQ	 TTX	 Text / Goto
 Info	 Info / Angle	 FAV	 Fav / Marker / PC
 0	 0	 CH -	 CH- / Page-
 Recall	 Back / Return	 Media	 Display / Media





	Originale	Sostituto
	I<< Prev	I<< / Preset-
	Play	Play / Slow
	<< Rew	<< / Tune-
	USB	+ Shift + 8
	Next>>I	>>I / Preset+
	Pause	Pause / Step / Freeze
	Fwd >>	>> / Tune+
	Red	Red / Netflix / Search
	Green	Green / APP / Repeat
	Yellow	Yellow / YouTube / Repeat
	Blue	Blue / Prime Video / Random

Originale	Sostituto

