



 





 

 







 


 



 





 





 
Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 DTV/ATV	 Smart
 Back	 Back
 P.Mode	 Shift + Format
 S.Mode	 Dual
 Sleep	 Sleep

Originale	Sostituto
 MTS	 Options
 Aspect	 3D
 FAV/List	 Pre Ch
 Media	 Media
 Freeze	 Eject
 Vol+	 Vol +
 Vol-	 Vol -
 CH+	 Ch +
 CH-	 Ch -
 Menu	 Menu
 Source	 AV
 Exit	 Exit
 Display	 Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left





Originale	Sostituto
 Enter	 Ok
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 <<	 <<
 Play	 Play
 Pause	 Pause
 >>	 >>
 I<</Cancel	 I<<
 >>I/SubPg	 >>I
 Stop/Index	 Stop
 Tv/Radio	 TV/R
 Subtitle	 Subt
 Size	 Format
 Reveal	 List
 Hold	 D. Menu

Originale	Sostituto
 Text	 Text

