







 





















 



 







 







 



 



 







 





| Originale | Sostituto | Originale | Sostituto |
|--|--|--|---|
|  Power |  Power |  0 |  0 |
|  Mute |  Mute / Dimmer |  Info |  Info / Angle |
|  Rec |  Rec / Rec Mode |  << |  << / Tune- |
|  TV Sys. |  D.Menu / Top |  Vol - |  Vol- |
|  Browser |  Display / Media |  Vol + |  Vol+ |
|  Copy |  Picture / Format |  I<< |  I<< / Preset- |
|  Music |  Smart / List |  >> |  >> / Tune+ |
|  1 |  1 |  Play / Pause |  Play / Slow |
|  2 |  2 |  Play / Pause |  Pause / Step / Freeze |
|  3 |  3 |  Stop |  Stop / Hold |
|  4 |  4 |  >>I |  >>I / Preset+ |
|  5 |  5 |  Home |  Shift + Menu / |
|  6 |  6 |  Up |  Up |
|  7 |  7 |  Return |  Back / Return |
|  8 |  8 |  Left |  Left |
|  9 |  9 |  Enter |  OK |
|  Repeat |  Shift + Green / APP / Repeat |  Right |  Right |

| Originale | Sostituto | Originale | Sostituto |
|--|--|--|--|
|  0 |  0 |  HDMI - BAT |  0 |
|  Info |  Info / Angle |  TUNE- |  TUNE- |
|  Vol - |  Vol- |  Vol + |  Vol+ |
|  I<< |  I<< / Preset- |  >> |  >> / Tune+ |
|  Play / Pause |  Play / Slow |  PAUSE |  PAUSE |
|  STOP |  STOP |  PRESET+ |  PRESET+ |
|  HOME |  SHIFT + MENU |  UP |  UP |
|  RETURN |  BACK |  LEFT |  LEFT |
|  ENTER |  OK |  RIGHT |  RIGHT |



