






Originale	Sostituto
 Power	 Power
 Eject	 Eject / Surround
 Timer REC	 Shift + Rec / Rec Mode
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Channel	 CH+ / Page+
 0/AV	 0
 TV/VCR	 TV/Radio /
 Channel Tracking-	 CH- / Page-
 Speed/SP/LP	 Zoom / Size

Originale	Sostituto
 Call	 Sound / Title
 REC/OTR	 Rec / Rec Mode
 Play/Slow+	 Play / Slow
 Pause/Still	 Pause / Step / Freeze
 <</<	 << / Tune-
 >>/>	 >> / Tune+
 Program	 D.Menu / Top
 Stop/Slow-	 Stop / Hold
 Enter	 OK
 Menu	 Menu / Home
 Cancel	 Exit / Cancel / Clear
 Index	 Smart / List
 ATR	 Display / Media
 Clock/Counter	 Sleep / Timer
 Zero/Return	 Back / Return
 Counter/Reset	 Picture / Format
 Audio Select	 Audio / Lang I/II

