


 

 
 

 


 


 

 

 

 


 
 





 





Originale	Sostituto	Originale	Sostituto
PWR On/Off		1. ?	 1
Info		2abc	 2
Subt.List		3def	 3
TV		4ghi	 4
Text		5jkl	 5
Zoom		6mno	 6
TV/SAT		7pqrm	 7
Menu		8tuv	 8
Menu Up		9wxyz	 9
Display		Guide Pilote	 Guide
Menu Left		0/10	 0
OK Enter		Red	 Red
Menu Right		Green	 Green
Exit		Yellow	 Yellow
Menu Down		Blue	 Blue
CH/Page+		Freeze	 Stop
CH/Page-		Dec/Pause	 Pause



Originale	Sostituto	Originale	Sostituto
East	>>		>>
LNB F.Forward	>>		>>
Lang./Rewind	<<		<<
H/V Play	Play		Play

